IQ BIG 2

USER MANUAL

Welcome

Thank you for purchasing this product.

For your cellular phone works properly, please follow the instructions in this manual. To prevent any possible incidents or malfunctions, please follow all safety warnings.

Screen displays and illustrations in this user's manual are designed to help you operate this phone to its optimum performance

Contents

1 Phone Layout 1
1.1. Keys and Parts 2
1.2. Icons and Indicators 3
2 Getting Started 4
2.1. Inserting the SIM Card and SD card..... 4
2.2. Unlock the Phone 5
2.3. Using the Touch screen 7
2.4. Super power mode 7
2.5. Using the Phones Buttons 8
2.6. Context Menus 9
2.7. Options menus 10
2.8. Menu Icons 10
3 Placing and Receiving Calls 10
4 The Home Screen 12
5 Connect to the Internet 17
6 Managing Notifications 19
7 Messaging 20
8 Multimedia 24
8.1. Camera 24
8.2. Gallery 25
8.3. Share an Album 25
8.4 Music 26
8.5. FM Radio 26

8.6. Record Sounds 27
8.7. Make Printscreens 27
9 Connect to Networks and Devices 27
10 Download Applications 31
11 Phone Settings 32
12 Health and Safety Information 36
13 System Upgrade (SW upgrade) 41
14 Battery Informations 47
15 Condition Of Waranty 48

1 PHONE LAYOUT

1.1 Keys and Parts

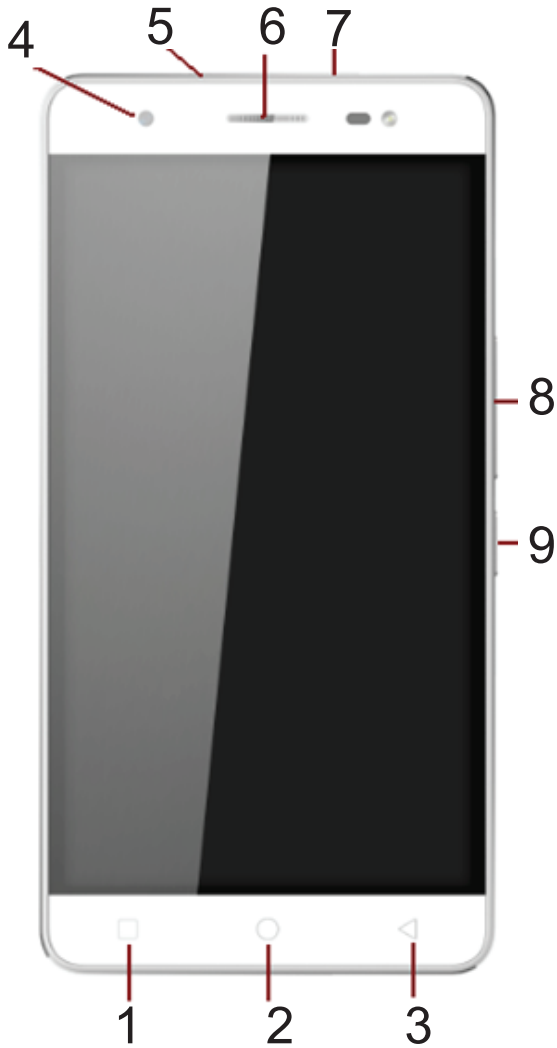

1. Menu Key
2. Home key
3. Back key
4. Front camera
5. Audio Jack
6. Receiver
7. USB Port
8. Volume Key
9. Power key

Key tips

Power/Lock key

- When powering off status, press and hold to turn on the phone;
- When powering on status, press and hold to enter phone options (Power off, Reboot, Screen Capture, and Airplane mode);
- To your battery, prevent accidental touches or when you want to wipe smudges you're your touch screen, put the touch screen to sleep by pressing Power/Lock key;
- To wake up the touch screen, just press Power/Lock key again, and then drag the lock icon up on the screen to unlock according to the clue on the screen.

Menu key

- Press to open a list of actions available in the current screen.

Home key

- Press to return to the Home screen from anywhere on your phone
- Press and hold to bring up the recent applications window.

Back key

- With in a menu, press to return to the previous screen, or to dismiss a dialog box or menu.
- When the onscreen keyboard is open, press to close the on screen key board

Volume keys

- Press to adjust the volume.

1.2 Icons and Indicators

Icon	Indicators	Icon	Indicators
	No signal		Vibrate mode
	Airplane mode		Ringer is silenced
	Problem with sign-in or sync		Phone microphone is mute
	Connected to a Wi-Fi network		Battery is very low
	Alarm is set		Battery is charged
	New text or multimedia		Battery is charging

Icon	Indicators	Icon	Indicators
	Uploading data		Problem with text or multimedia
	Downloading data		An open Wi-Fi network is
	Missed call		Data is syncing
	Phone is connected USB		

2. Getting Started

2.1. Inserting the SIM Card and SD card

Warning

The handset support 2 Micro SIM cards & a micro SD card. Using incorrect sized SIM card may damage your phone.

The battery cover cannot be removed, the battery is built-in type & cannot be removed.

1. **Inserting the SIM card(s):** Use the pointed tip of the metal pin that comes inside your gift box to open the SIM slot. Pull out the SIM tray & place the micro-SIM card into the SIM tray. Then insert the SIM tray into slot. There are 2 slots on SIM tray, when you use two 3G cards at the same time, only SIM1 slot can recognize 3G while SIM2 slot can only use 2G network. If there is only one 3G card, both slot can recognize 3G network.
2. **Inserting SD card:** Use the pointed tip of the metal pin that comes inside your gift box, to pull out the T card tray. Then insert the micro SD card into slot as indicated in the above image.
3. **Resetting the Handset:** You can Press & hold the power key for 10 seconds to restart. You can also open to T card tray, use

2.2. Unlock the Phone

You may need to provide PIN, Password, or draw a pattern to unlock your phone.

To unlock the screen:

- Press the power key to wake up the phone.
- Hold and drag the unlock icon to the up to unlock.

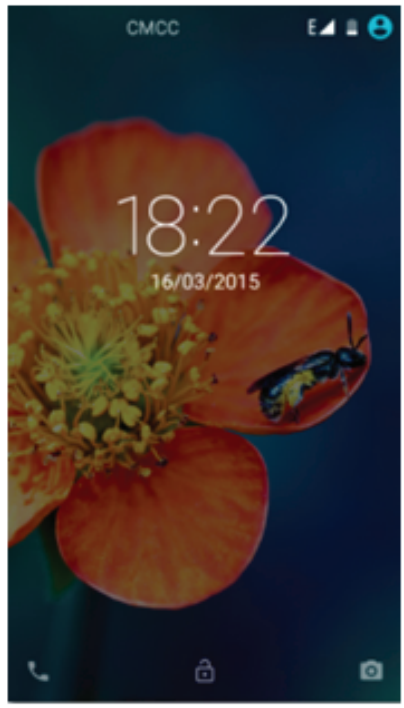

You may be required to unlock your phone based on the unlock method in settings.

To set the unlock method:

- On the main menu, touch Settings > Security.
- Touch set up screen lock.
- Choose the type of locking as desired. You can set your screen lock on the basis of None,Swipe ,Voice Unlock, pattern, PIN or Password .

2.3. Using the Touch screen

Your mobile phone features a touch screen which provides a faster and more intuitive way for you to navigate through lists and menus.
The controls on the touch screen change dynamically depending on the task you are performing:

- **Selection:** To select an item or button on the screen, touch the item with your fingertip. The button will illuminate when it is selected.
- **Context menus:** To open the context menu for an item on the screen, you can: Touch the item on the screen with your fingertip. Press Menu key to open context menu.
- **Zoom in or out:** Zoom in / out on a picture when viewed in full screen, web page, or map: You can zoom in and out by placing two fingers on the screen at once and pinching them together (to room out) or spreading them apart(to zoom in)

2.4. Super power mode

Open the Super power mode can save battery power, extend the standby time, bring your cell phone use more

- Touch icon, then select Super Power , tap and confirm to open super power mode.
- Open after all the interface become grey, and the interface will show battery and standby time. In this mode can

increase a few application to save electricity, such as: Contacts, Phone, Messaging, Calculator, Browser, Desk Clock, Calendar, Maps, Line, WhatsApp and Facebook .

- Interface in Super power mode, tap on the icon in the top right corner of the more, select Exit, exit the Super power mode, and the interface back to normal mode.

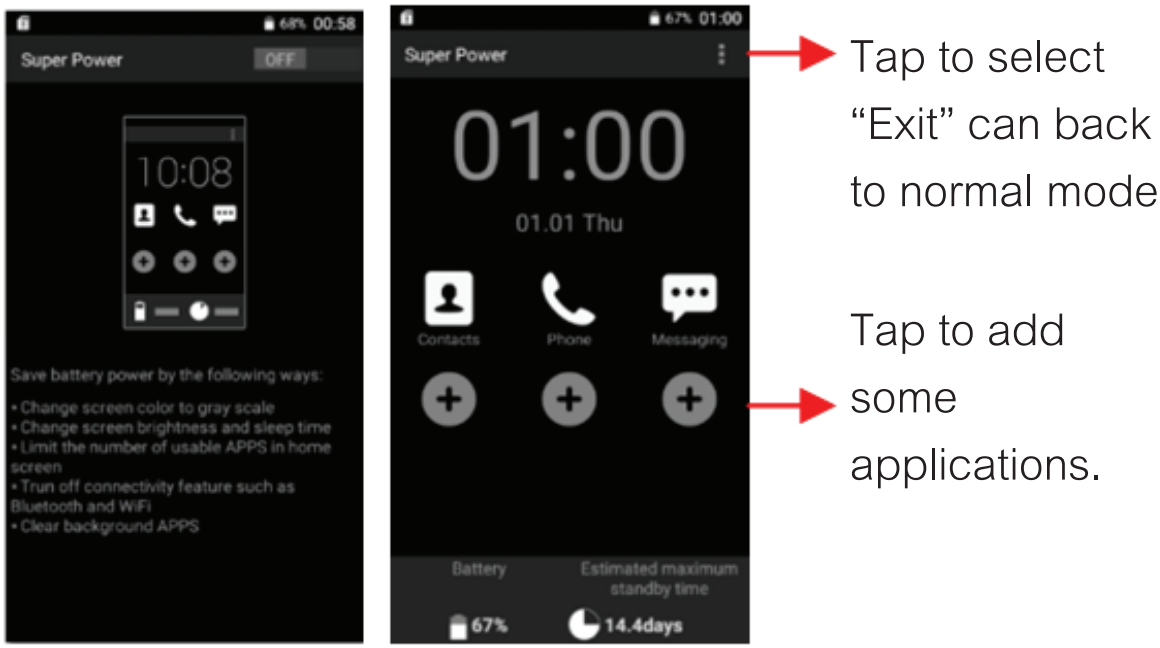

2.5. Using the Phone's Buttons

The phone's buttons offer a lot of functions and shortcuts.

Button	Press
	Menu: opens context menu with further options and actions, content depends directly on applications.

Button	Press
○	**Home:** returns to Home screen. Hold it to access the list of last used applications.
◁	**Back:** returns to the previous screen you were working in, even if it was in a different application. Can be used to hide the keyboard.

2.6. Context Menus

You can open context menu by touching key. Not all screens have context menus. If you touch key inside application that has no context menu, nothing happens. Examples of context menu from Contacts environment:

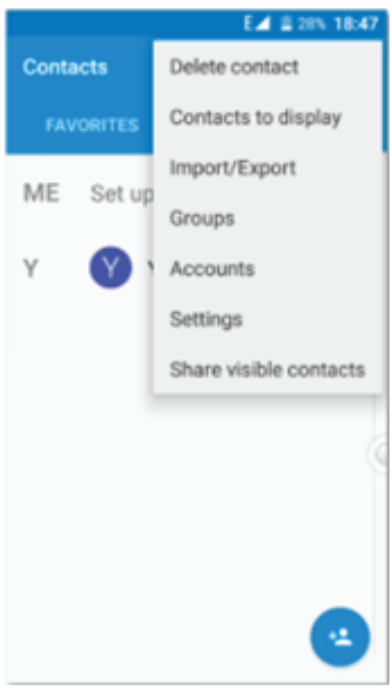

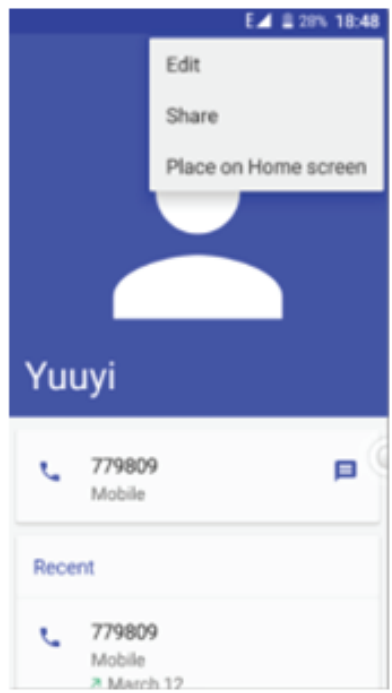

2.7. Options menus

Options menus contain tools that apply to specific items on the screen. You can open an option by touching and holding an item on the screen. Not all items have options menus.

When you touch and hold some items on a screen, an Options menu opens.

2.8. Menu Icons

You have the following menu icons to easily let you access its important features:

Opens the dialer

Opens messaging

Opens the main menu

Opens the contacts list

Opens the browser

3 PLACING AND RECEIVING CALLS

You can dial a phone number or touch a number in your contacts. You can also place from the call log or contacts.

3.1. Make a Call

- Tap the icon on main menu or the home screen to dial the desired number.
- Touch the icon on main menu or the home screen to make a call from call log, contact, or favorites.
- To dial an international number, touch and hold the 0 key to enter the Plus (+) symbol, and then enter the international country prefix, followed by the phone number
- Press the Volume Up/ Down keys to adjust the call volume.
- You can access Call Logs, Contacts from the dialer screen.
- While during a call, touch the icon to end a call.

3.2. Disable Phone Calls (Airplane mode)

Some locations like airplanes may require you to turn off your mobile, Wi-Fi, and BT wireless connections.

- Press and hold the Power button.
- Touch the Airplane mode.

3.3. Disable SIM card

You may have only one SIM card and you want to close the SIM card.

To do it go to:

Settings

>SIM Cards

> turn off SIM 1/SIM 2

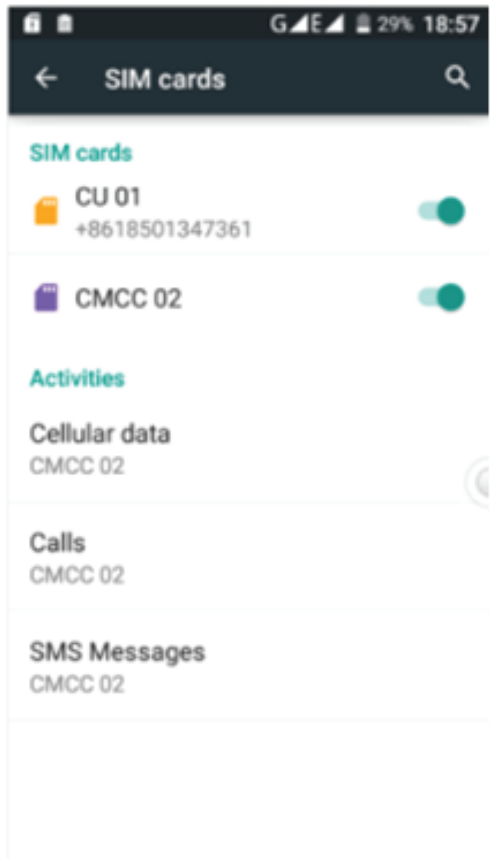

Then you can choose which SIM card enable or disable:

- SIM 1 is for 3G and 2G (SIM1 slot)
- SIM 2 is for 2G (SIM2 slot)
- If insert the 3G SIM card in the SIM1 slot and SIM2 slot, only SIM1 slot can search the 3G network.

4 THE HOME SCREEN

When you sign in, the home screen opens.

The status bar shows the time, signal strength, battery status, and notification.

Touch an icon to quickly turned on and off frequently used functions

Touch and hold an empty spot to change wallpaper.

Touch an icon to launch the corresponding application; Touch and hold to move or remove an icon or a widget.

The Home screen is your starting point to access all the features on your phone. Touch the main menu icon at the bottom of the screen to view all installed applications.

4.1. Open and Close the Launcher

- Touch the Launcher Icon to open the main menu.
- You have access to all applications installed on your device when available.
- Touch an application to open and launch it.
- To add an application shortcut to the desktop screen, press and hold it until it vibrates and enters Home

screen. Place it and release your finger.

- Slide the Launcher left or right to bring more icons into view.
- As soon as you install a new application, it comes in this list.

4.2. Switch to Recently Used Application

- Press and hold the ○ icon for a few seconds.
- Touch an icon to open its application. Or press ◁ to return to the current application.

4.3. Customize Home Screen

You can add applications, shortcuts, widgets, or change the wallpaper

Applications:

- Press ◯ to open the Home screen.
- Touch the Launcher Icon to open the main menu.
- To add an application shortcut to the desktop screen, press and hold it until it vibrates and enters Home screen. Place it and release your finger.

Widgets:

- Press ◯ to open the Home screen.
- Touch the Icon ▢ to open the widgets.
- To add a widget shortcut to the desktop screen, press and hold it until it vibrates and enters Home screen. Place it and release your finger.

Wallpapers:

- Start from the Home screen; press MENU to access the context menus. You can also touch & hold an empty area of the home screen and in the menu, touch Wallpapers
- Tap Desktop Wallpapers item. Select one of the pictures. It can be from the Gallery,Live wallpapers
  Gallery contains the pictures you have stored on your phone storage. Wallpaper is pre installed on your phone.

- When you've decided on a picture, make sure it is highlighted, and then select Set wallpaper
- If you select Gallery, the picture album opens. Slide your fingers to find the picture you want to use, and then touch it. If this picture is too large, you must crop it first

Folders: You can very easily regroup desktop icons in a folder on screen to save space and access more applications.

- Touch and hold any icon on desktop screen to move it.
- Go on another icon and release to create a folder containing both icons.
- Then add as many icons as folder can hold, give it a name, move it where you want.

4.4. Use the Float task

Through this function, you can operate the device by one hand only.

- Go to Settings > Float Task, touch the switch icon to turn on the Rainbow function
- Touch the floating icon , show shortcut menu.
- Touch to close it.

4.5. Black screen gesture

You can enter corresponding menu by draw different gestures on black screen.

- Go to Settings > Black Screen Gesture, touch to turn on Gesture switch.
- You can edit the gesture to open desired function.
- Lock the screen, draw the correct gesture to open the corresponding menu.

5 CONNECT TO THE INTERNET

5.1. To configure your Internet:

- Go to Settings > Data usage > SIM card > Cellular data. By default, your network provider sends the Access
- Point Name settings via SMS, or it comes automatically with your SIM card. You may need to install these settings. After this, you can choose from the listed access point names. If the access point names are not listed by default, please contact your network provider for the same.
- To add any operator Access point Name, go to Settings>More>Cellular networks>Access Point Names.

WARNING:
to avoid any over cost contact your operator to know more about Access Point Name regarding your subscription.

- After you have selected or configured the access point name, go to Settings> Data usage > SIM card > Cellular data >Tap to enable Internet connection.

5.2. Access Internet via Wi-Fi

To browse the Internet via Wi-Fi:

- Go to Settings > Wi-Fi > check the icon switch to

use Wi-Fi for your data connection. The phone will scan for available wireless networks.

- Next, select the WIFI connection listed under Wi-Fi networks.

6 MANAGING NOTIFICATIONS

Notification icons inform you of new messages and events. When you receive a notification, its icon appears in the status bar, along with a summary that appears only briefly.

6.1. Open the Notifications Panel

Drag the status bar down from the top of the screen as shown below:

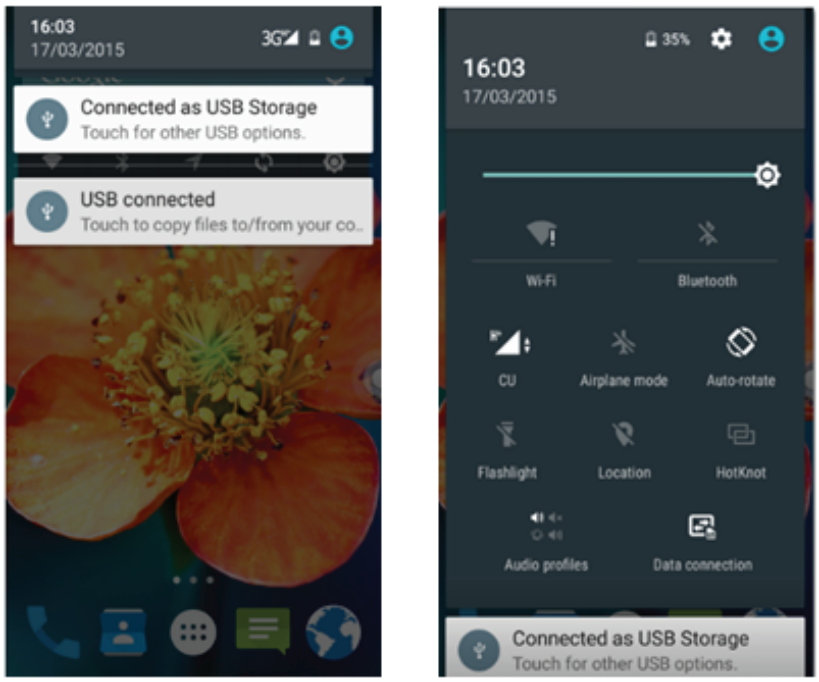

The Notifications panel displays a list of your current notifications.

6.2. Respond to Notifications

Open the notification panel and touch a notification to respond to it. What happens next depends on the notification.

6.3. Close Notifications Panel

Drag the tab at the bottom of the Notifications panel to the top of the screen. Or just press the back button. The panel also closes when you touch a notification to respond to it.

7 MESSAGING

7.1. Message environment & Settings

You can use Messaging to exchange text messages and multimedia messages with your friends.
You can also press the key and open the context menu to work on messages and their settings.
The messages settings allow you to set SMS/MMS limits, notifications, vibrate or ringtones, delivery reports and many others.

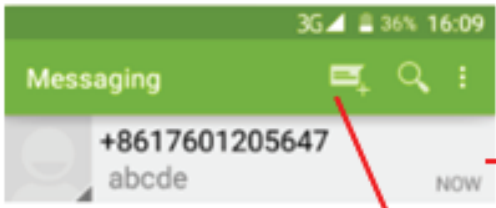

Touch to open a messaging conversation

Touch to compose a new text or multimedia

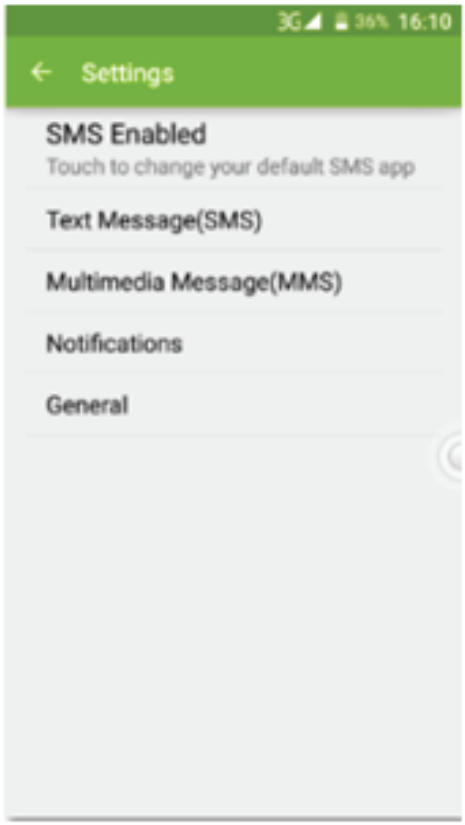

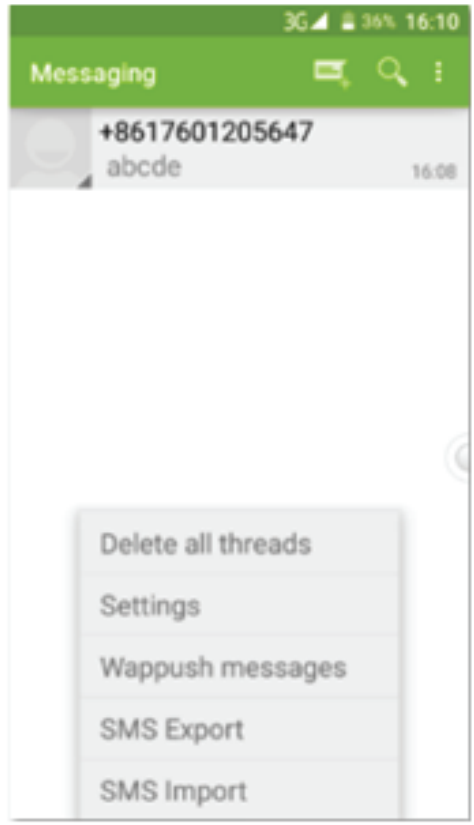

7.2. Using the Onscreen Keyboard

Some applications display the keyboard by default. In others, you touch a text field where you want to enter text, to open the keyboard.

Write your message here.
After typing, press ◁ icon to close the keyboard.
Touch and hold the text field to open a menu and to copy/cut texts.

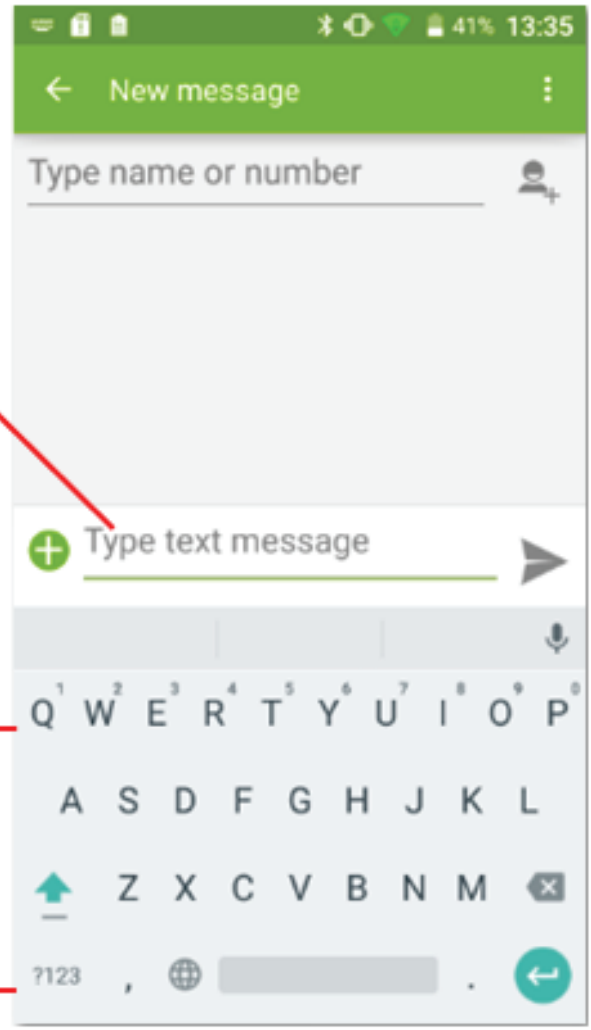

Touch to enter letter

Touch to switch to the numeric and symbol keyboard .

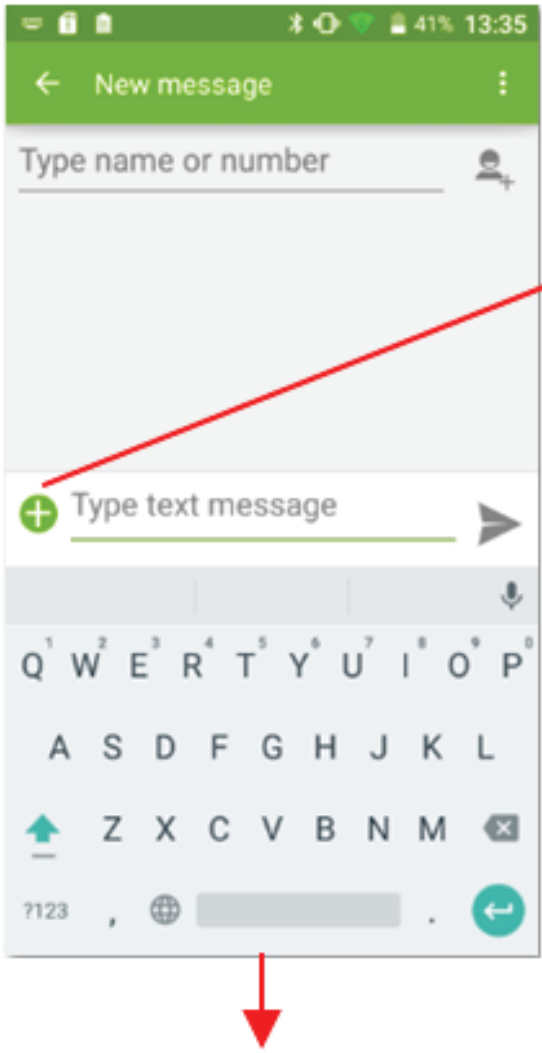

Add to pictures, video, audio, people, calendar, or take pictures and videos.

Press the send

Long touch to switch speech input.

7.3. Create and Send Multimedia Message

A Message becomes an MMS if you send it to an email address, or add multimedia media file(s).

- Touch compose new message.
- Enter or select a mobile phone number.
- Touch the composition text box and write your message.
- Touch the ☐ key to open the context menu.

- Touch Attach to attach various types of files.
- Send the MMS.

7.4. Operation on a message:

- Open the message thread containing the message your want to operate.
- Touch the ☐ key until a context menu opens.
- Make your choice.

You can also Insert quick text, Insert contact, add subject.

7.5. Lock a Message

You can lock a message so it won't be deleted if you reach your storage limits.

- Touch and hold message in a message window.
- Touch Lock in the menu that opens.

Unlock a message by touching and holding it and then touch Unlock.

8 MULTIMEDIA

8.1. Camera

Your camera's pictures and videos are stored in both the SD card and device. You can copy pictures and videos from both the SD card and device to a PC and vice versa.

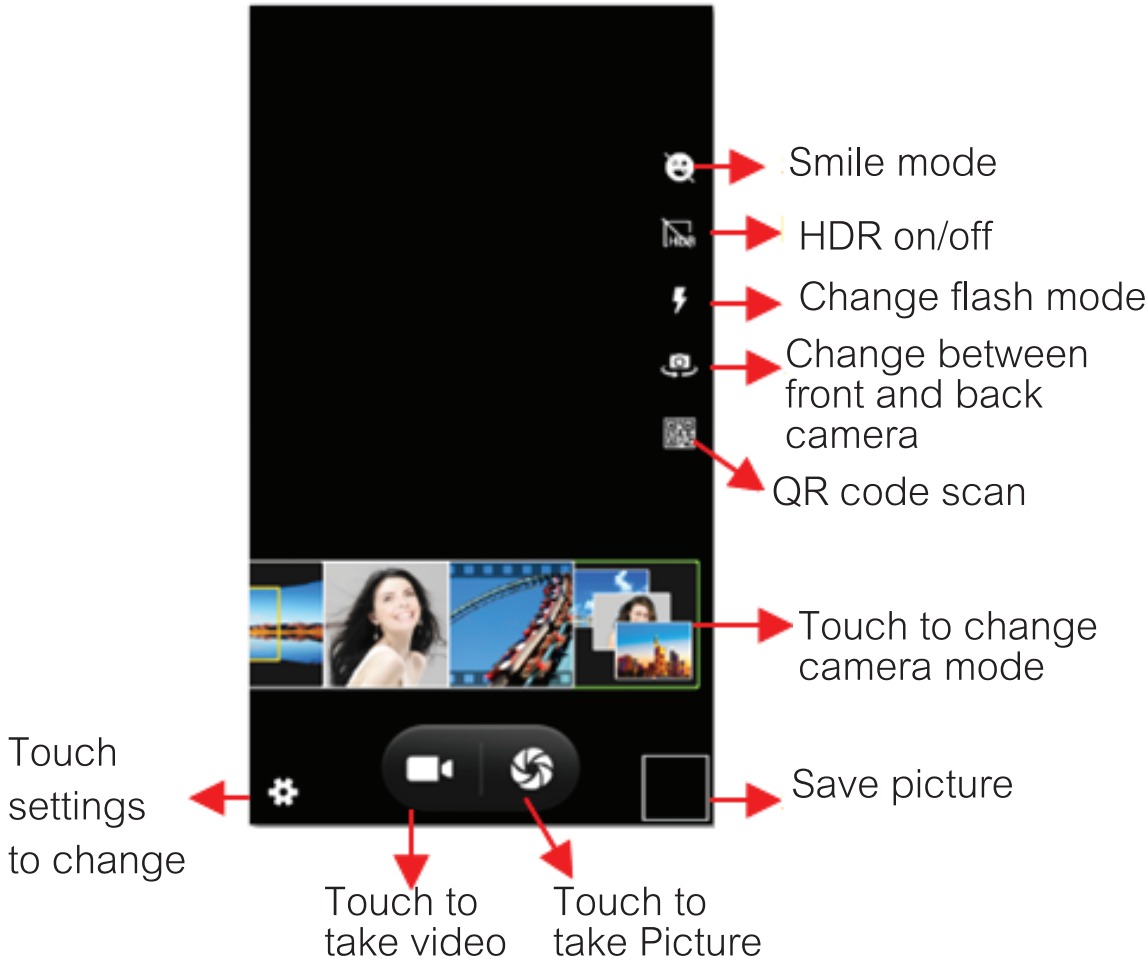

8.2. Gallery

You can use the Gallery to view pictures and play videos and share files.

- Touch the Gallery icon in the main menu.
- Touch an album to open and view its contents.
- Touch a picture or a video in an album to view it.

8.3. Share an Album

- Open the main Gallery window.

- Check or uncheck the albums you want to share.
- Touch the icon at the top of screen to share via Bluetooth, Gmail. Or touch the message icon at the top of screen to Share via MMS
- You can share via email, Bluetooth, and so on.

8.4. Music

You can easily transfer your favorite music from your PC to the SD card and experience a whole world of interesting and melodious music.

Touch the ☐ key or the intuitive buttons and icons on the phone in music interface to enjoy the features of your music player.

Press the phone's volume up/down keys on the right side of the mobile phone to adjust the volume.

8.5. FM Radio

You can listen to your favorite FM channels using the inbuilt FM receiver of your phone and a corded earphone Touch icons on the phone in Radio interface to explore and enjoy the features of your inbuilt FM radio:

- Record sound
- Save your favorites FM stations
- Enable speaker

Press the phone's volume up/down keys on the right side of the mobile phone to adjust the volume.

Troubleshooting:
it happens sometimes that applications crash and stop working. When FM radio crash you keep hearing the current FM station but you are not able to change it, in this case the phone must be reboot.

8.6. Record Sounds

- Touch the Sound Recorder in the main menu.
- Tap to start recording a voice clip. "Recording" appears when it is recording a voice clip.
- Tap to stop or save the recording.

8.7. Make Screenshot

Press and hold for 1 second both Volume Down and Power buttons together.

9 CONNECT TO NETWORKS AND DEVICES

Your phone can connect to a variety of networks and devices, including Wi-Fi, GPRS, BT, devices, such as

headsets. You can also transfer files to/from your PC through the data cable.

9.1. Connect to PC

Plug the phone to a computer with the supplied cable.

- Go to Notifications bar
- Touch "USB connected"
- Then touch “Turn on USB storage” (see below).

This mounts the external SD card and internal memory as USB keys. Then you can manage your files directly from your computer.
Once finished, click again (“Turn off USB storage”) to unmount SD card from computer and use it with phone again.

WARNING:
during USB connection, SD card is no longer available to the phone, all apps using SD card cannot work. Don't erase/move applications data also.

9.2. Connect to Internet

Refer to section 5 for details.

9.3. Connect to Wi-Fi Networks

Refer to Section 5 for details.

9.4. Pair With BT Devices

- Go to Settings > check the icon switch to
- If BT is off, check BT to turn it on. Your phone scans and displays the BT devices in range.
- If the device you want to pair with is not in the list, make it discoverable.
- If your phone stops scanning before you make the other

device discoverable, touch key, then select Refresh.

- Touch the ID of the other device in the list Settings to pair them. If you are prompted to for a password, enter any password on one device and enter the same password you entered in the other device to be paired.), If the pairing is successful, your phone connects to the device.

9.5. Connect to other devices

Transfer files through HotKnot function to other device, HotKnot function should use with wi-fi or bluetooth

- Touch Settings > HotKnot, Check the icon switch to
- Select one file to transfer by touch the icon
- Ensure the receiving device has turned on HotKnot, and keep its screen unlocked.
- Put your device onto the receiving device screen-to-screen.

9.5. Connect to Internet via your Phone

You can browse the Internet on your PC using your mobile phone. To do this:

- Connect your mobile phone to your PC via the USB cable.
- Go to Settings>More >Tethering & portable hotspot and then touch USB Tethering.

A prompt for installation will appear on your PC. Proceed as suggested.
In case of Linux, Windows 7 and Vista OS, the drivers get automatically installed. However, in case of Windows XP, , maybe you need to manually install the drivers.

9.6. Install Secure Certificate from SD Card

If your VPN or Wi-Fi Network relies on secure certificates, you must obtain the certificates and store them in your phone's storage, before you can configure access to those VPN or Wi-Fi networks on your phone.
You may need to download the certificates from a website.

- Copy the certificate from your computer to the root of the SD card.
- Touch Settings> Security.
- Touch Install from SD card under Credential Storage.
- Touch the file name of the certificate to install. Only the names of certificates that you have not already installed on your phone are displayed.
- If prompted, enter the certificate's password and touch OK.
- Enter a name for the certificate and touch OK.

10 DOWNLOAD APPLICATIONS

The phone has a default configuration which includes some applications. Discover all others apps by using Play Store. You will be able to connect with 3G or Wi-Fi for example, and by signing in the application with just an email



This is what it looks like:

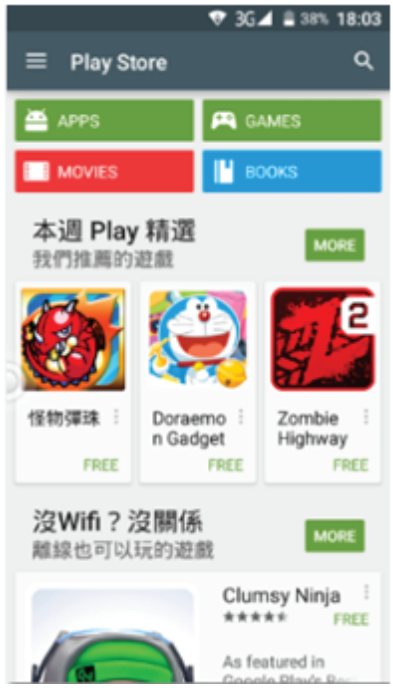

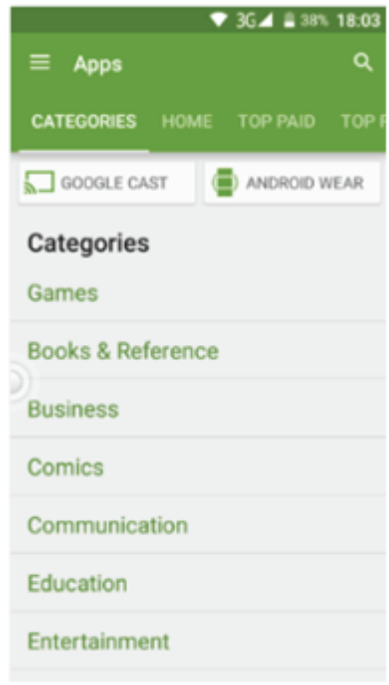

11 PHONE SETTINGS

You can go to Settings to customize your phone's preferences and behavior in a variety of ways:

Wi-Fi	Lets you configure and manage connections to networks and devices by Using Wi-Fi.

BT	Lets you manage BT to communicate with other BT devices, such as headsets and other portable devices.
HotKnot	Can transfer data when the screen touches another device.
SIM cards	Lets you turn on or turn off your SIM card and configure your SIM card to be used to voice call, SMS send and cellular data.
Data usage	Data usage refers to the amount of data uploaded or downloaded by your device during a given period.
More…	Lets you configure and manage connections to networks and devices.
Display	Lets you configure brightness and other screen settings.
StorSound & notification	You can switch profiles. At what volume the phone rings, vibrates etc.

Storage	Lets you see and manage available space on your phone and on your SD card.
Battery	Lets you check the battery level and status.
Apps	Lets you view all applications downloaded or on SD card and mange all running applications in devices.
Location	Lets you set the location related settings like Wi-Fi and mobile network, GPS settings for your phone and check to take account of your location in search results and other services.
Security	Lets you protect personal information, like adjust your phone's lock, set SIM card lock etc.
Accounts	Lets you add, remove and manage your Google and other supported accounts.
Language & input	Lets you select the language for the text on your phone and for configuring the onscreen keyboard.

Backup & reset	Lets you backup your personal data and settings and reset your phone.
Date & time	Lets you choose preferences such as format and time zones.
Scheduled power on &off	You can set on / off
Accessibility	Enable your installed accessibility applications and adjust related settings.
Black Screen Gesture	You can set Gesture Switch.
Printing	You can make the cloud print.
Float Task	Can turn on/off the one hand function.
Developer options	Lets you enable or disable USB debug and set interface animation effect.
About phone	View information about your phone, such as signal strength, status, phone information and battery use.

12 HEALTH AND SAFETY INFORMATION

Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.

Certification Information (SAR)

Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. These guidelines include safety margins designed to assure the protection of all persons, regardless of age and health.

SAR (specific absorption rate) is the unit of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.

The true SAR level during phone usage will be far lower than this level.

The SAR value of the phone may change depending on factors such as how close you are to a network tower, use of accessories and other enhancements.

The highest SAR value of the device is 0.612 W/kg (head) and 0.597 W/kg (body) for 2G, 0.584 W/kg (head) and 0.629 W/kg (body) for 3G, averaged over 10 gm of human

tissue. tissue.
The SAR value may differ depending on national reporting, testing requirements and the network band.

SAR Recommendations

Use a wireless hands-free system (headphone, headset) with a low power BT emitter.
Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women.
Prefer to use your cell phone when the signal quality is good.
People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
Maintain a preferable distance of 15 mm from the device.

Safe Driving

Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

Flight is influenced by interference caused by the phone. It

is illegal to use a phone on the airplane. Please turn off your phone or switch to flight mode during a flight.

In Hospitals

Your Phone's radio waves may interfere with the functioning medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency.
Switch off your device when regulations instruct you to do so.
Do not carry the wireless device in the Chest pocket.
Turn off the phone if there is any reason to suspect that interference is taking place.

Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:
Keep the device dry. If your device gets wet, remove the

battery without turning on the device, wipe it with a dry cloth and take it the service center.
Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
Do not attempt to open the device other than as instructed in this guide. Repairing the phone by yourself other than our authorized service agents/centers goes against the warranty rules.
Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations

Please put the battery in a well-ventilated place out of direct sunlight. Charge the battery at room temperature range.
If the time span of the battery after charging becomes

much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
Use manufacturer approved batteries, chargers, accessories and supplies. I-mobile will not be responsible for user's safety when using unapproved batteries or accessories.

Recycle Your Phone

The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling. of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help

preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment.

13 SW UPGRADE (OTA)

Notice:

Before testing, please make sure:

1. WIFI is available.
2. Battery power is more than 40%.

Check the firmware:

Check the firmware version before the System Software Update.

Settings -> About phone -> Build number

Pic.1

Android Mode:

1. Click the icon ““Software Update” in Application Manager (Pic.2) Software Update will start to check for update (Pic.3)

Pic.2

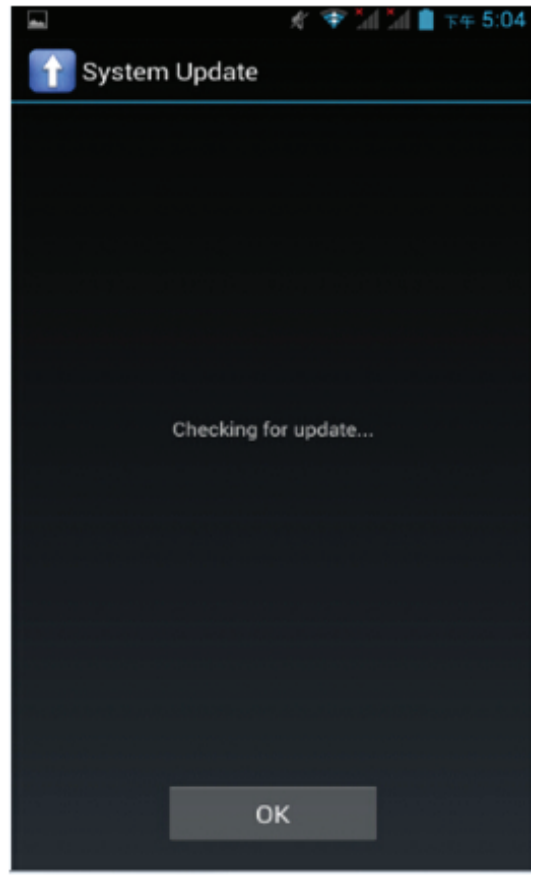

Pic.3

2. Pic.3->Choose OK, will try to connect to server, 3 cases will happen:

Case 1: Connect to server successfully, a new firmware is found on server.Then it will show you the information and description of the new firmware package.(Pic.4)

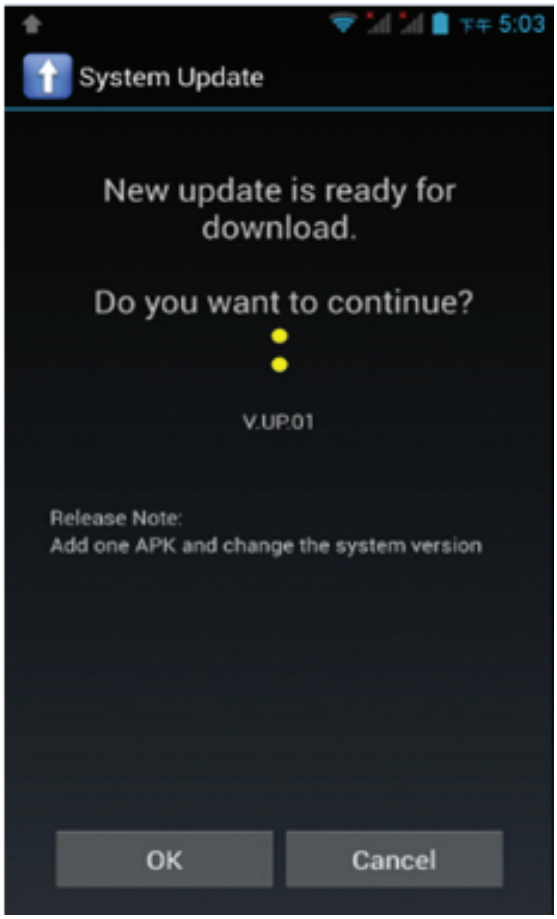

Pic.4

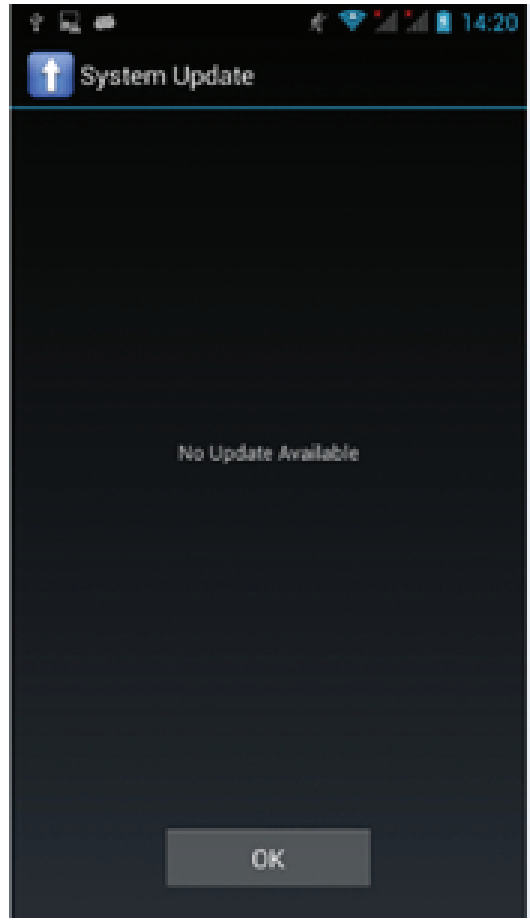

Pic.5

Case 2: There is no new firmware available on server. It will pop up” No Update Available”, if you choose ”OK”, the application will exit. (Pic.5)

Case 3: Fail to connect to server. It will pop up "Network error!", if you choose ”OK”, the application will exit. (Pic.6)

3. Pic7->Choose OK, will show the downloading interface, or if you choose ”Cancel”, the application will exit.

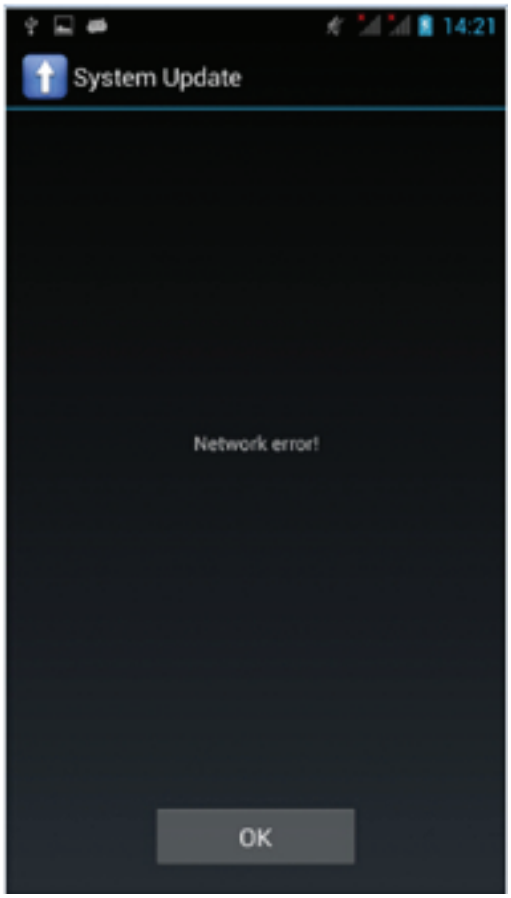

Pic.6

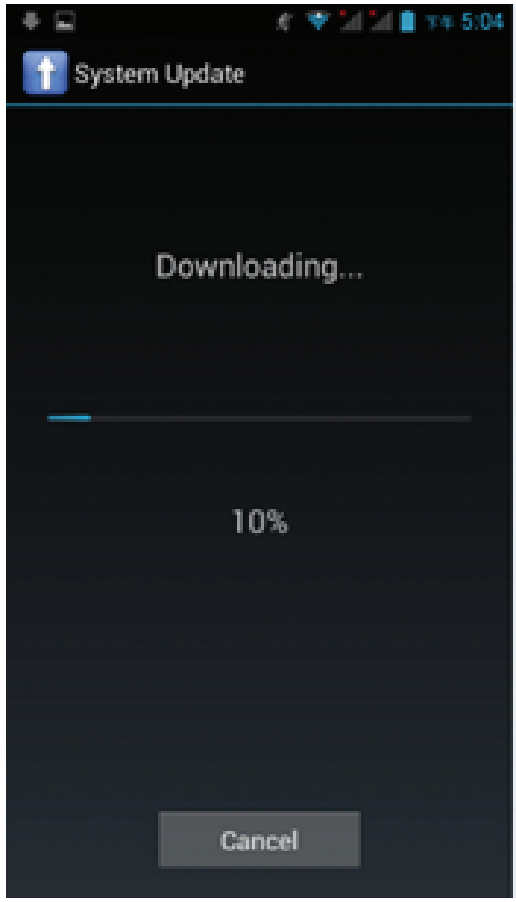

Pic.7

4. Update interface:
   - 4.1 After finish downloading, it will ask you: “Do you want to install now?”(Pic.8)
   - 4.2 Pic.8, if choose OK, the phone will reboot, then enter the Recovery Mode.(Pic.8->Pic.9)
   - 4.3 Pic.8, if choose Cancel, Will exit the application. When you enter the application next time, will show you Step 4 directly.

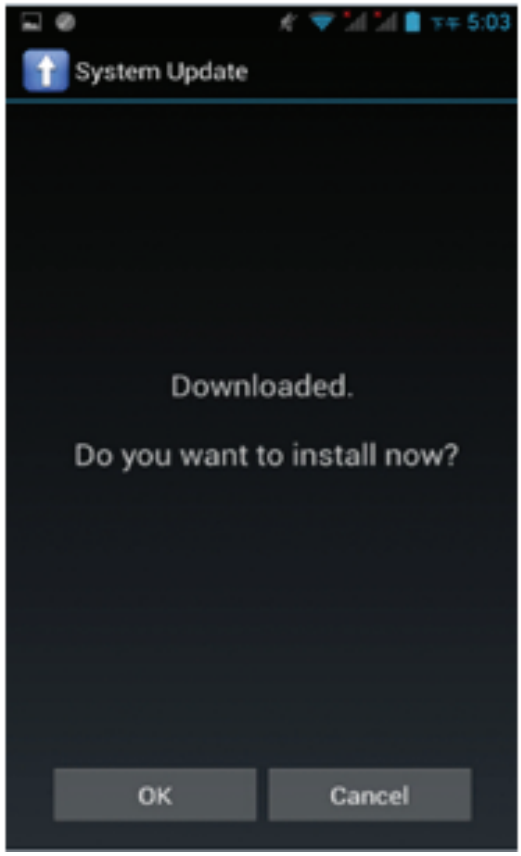

Pic.8

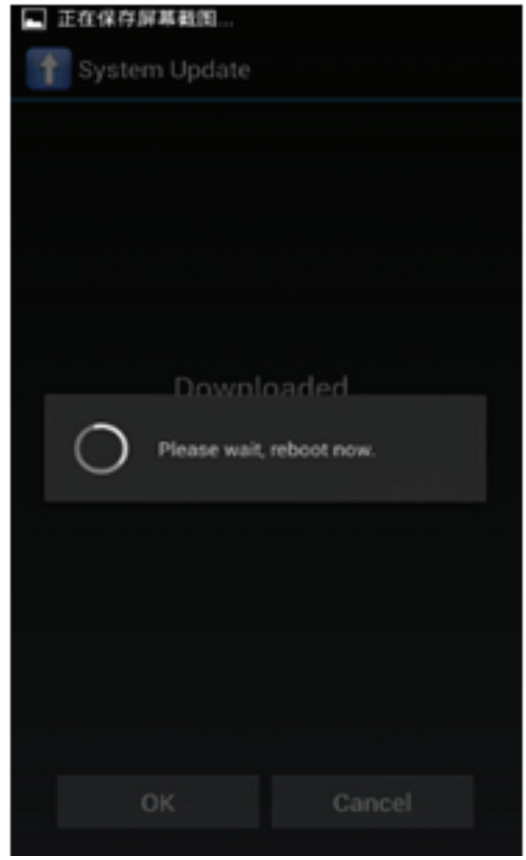

Pic.9

Recovery Mode:

Some codes and a progress bar will show in phone screen. Phone will reboot after the recovery is finished. Then the phone will enter the Android mode again.

Android Mode:

Update result: Update successfully

Check the firmware again:

Check the firmware version again after the System Software Update.

Settings -> About phone -> Build number

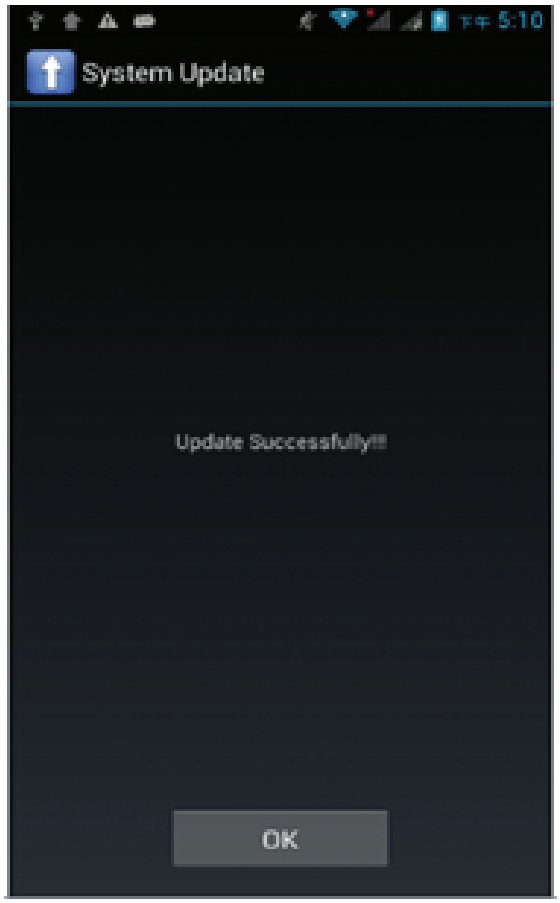

Pic.10

Check the firmware again:

Check the firmware version again after the System Software Update.

Settings -> About phone -> Build number

14 Battery Informations

Type	Capacity
Li-Polymer	4000 mAh

- The battery life depends on many factors, including the SIM card, network conditions, settings, usage and enviorenment.
- Making calls, turning on the backlight and music player will consume more battery power.
- The standby time is shorter when the network is not available than in the standard status.
- For power saving, the backlight turns off automatically if your phone stands idle for an assigned time.
- The performance of battery varies with the charging status, temperature, local radio wave and backlight status.

15 Condition Of Waranty

1. Mobile phone device, portable charger, charger, wireless headset are in-warranty of 12 months after the date of purchase.
2. Battery, headset, USB data connector, memory card, are in-warranty of 6 months after the date of purchase.
3. This warranty shall apply to mobile phone and accessory under “i-mobile” brands that are purchased from Shop namely, I-mobile by Samart and Authorized Distributor or Authorized Service Center as appointed in Thailand only.
4. The condition of the warranty for mobile phone and accessory that are purchased in other countries, except Thailand. It shall be applied in accordance with the applicable law. For Thailand, the purchaser acknowledges the end of warranty period as stated in the warranty sticker or purchase's record of i-mobile system.
5. Within the warranty period, maintenance or parts replacement is free of charge. Should be noted that i-mobile reserves the rights no return the damaged part.
6. i-mobile provides warranty for mobile phone and accessory with the terms and conditions that are stated

in the law excluding the commerce, product satisfaction, lost of benefit or expected profit, loss or damages from the violation of personal rights in conversation, and working discontinuance or loss of information arising of the use or inability to use.

7. In cellular network / signal and sounds that are used with mobile phone and accessory is the service of independent operators, not i-mobile. Therefore,
8. i-mobile will not be responsible for the working process, the readiness of the service, and the area covered. Any mobile phone and accessories that are already repaired or had parts replacement, the warranty period will continue from the remaining warranty onward or 60 days from the repaired date whichever is longer.
9. Customer has to pay for the repair cost and cost of replacement parts provided that the said repair are not in the warranty conditions.
10. The warranty sticker on the mobile phone must not be torn, tattered, scraped or crossed out.

THIS WARRANTY IS VOID UNDER THE FOLLOWING CONDITIONS

1. Mobile phone and accessory are damaged due to the abnormal use, improper use, being stored in the damped or overheated area, or other inappropriate environment, the interference that can cause damage, including unforeseeable accident, spill with liquid or food, or any actions that cause damages to mobile phone and accessories.
2. Mobile phone and accessory are damaged due to the natural disaster.
3. Mobile phone and accessory are repaired, changed parts, adjusted, modified, connected, customized without any authorization by i-mobile.
4. Using of mobile phone and accessory together with, or connect with the mobile phone or accessory that are neither provided nor certified by i-mobile including any accessory are inappropriate to use together with mobile phone and accessory.
5. Small alteration in the brightness and color on the screen might occur in each mobile phone and accessory, might results in bright or dark dots on the screen. This is called as pixel defect. It can occur when these pixels are malfunction and cannot be modified.

The Pixel defect of 2 pixels is considered acceptable. Small alteration in a picture taken by a camera might occur in each mobile phone and accessory is considered normal and it is not the camera module to be deemed as malfunction.

6. Editing, scarping, crossing over the IMEI number of the mobile phone or accessory, including the warranty number will be deemed as the termination of the warranty.
7. Damaging of the label, warranty sticker on the mobile will be deemed as termination of the warranty.
8. i-Mobile will not assure provided that the software from i-mobile will be up to your wishes or the working process of the software will not be discontinued or flawless. i-mobile will not assured provided that the additional software to download or install by you for the purpose of work or entertainment will be up to your wishes without mistakes and flaw that is out of control of i-mobile.
9. The warranty and responsibilities of i-mobile are not covered the malfunction of any software or access of information from virus, or unauthorized access, which cause the damage in the banking transaction, E-banking, or any important information, or using the mobile phone illegally.

10. The warranty and responsibilities of i-mobile are not covered the malfunction of any software or access of information from virus, or unauthorized access, which cause the damage in the banking transaction, E-banking, or any important information, or using the mobile phone illegally.
11. The warranty will not cover the loss of personal information during the use or during the installation, software remove, including applications, songs, videos, and any memberships that Customer has already purchased.
12. The warranty will not cover the responsibility of the loss of any personal information during the repair at Authorized Service center of i-mobile, including the applications, songs, videos, and any memberships that Customer has already purchased.
13. The warranty will not cover the damage that occurs from the use of any device under “i-mobile brand” with other products which are not the product of i-mobile.
14. The warranty will not cover any expenses in the co-ordination with i-mobile for solving the problem and the process of delivering for examination and repair service.